 
 






 


 

 
 

 
 















Originale	Sostituto
 Power	 Power
 Timer On/Off	 Sleep / Timer
 Mute	 Mute / Dimmer
 Sound Mode	 Sound / Title
 Disc Skip	 Picture / Format
 Program/Set	 Menu / Home
 Aux	 AV / Input / RDS
 Deck 1/2	 TV/Radio /
 CD/Repeat	 3
 Mono/St	 Fav / Marker / PC
 Tuner/Band	 6
 << Tape	 << / Tune-
 >> Tape	 >> / Tune+
 Stop Tape	 Shift + Stop /
 <> Tape	 5
 Stop CD	 Stop / Hold
 Play/Pause CD	 Play / Slow

Originale	Sostituto
 Vol+	 Vol+
 Vol-	 Vol-
 Up/CD >>I	 Up
 Down/CDI <<	 Down
 Tuning Mode	 OK

