



Originale	Sostituto
Power	Power
Sleep	Sleep / Timer
Input TV	AV / Input / RDS
Power TV	Shift + Power
Program	TV/Radio /
1	1
2	2
Repeat	Green / APP / Repeat
Repeat	Repeat
Function+	CH+ / Page+
3	3
EQ	Shift + Subtitle / EQ
4	4
5	5
5	5
Function-	CH- / Page-
6	6
7	7
Zoom	Zoom / Size

Originale	Sostituto
7	7
Dimmer	Shift + Mute / Dimmer
8	8
9	Shift + Sleep / Timer
9	9
0	0
0/Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Angle	Info / Angle
DVD Top Menu	Menu / Home
DVD Menu	D.Menu / Top
Setup	Setup / OPT /
Display	Display / Media
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
Up	Up





Originale		Sostituto		Originale		Sostituto	
	Down		Down				
	Right		Right				
	Left		Left				
	OK		OK				
	I<</Preset-		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	>>I/Preset+		>>I / Preset+				
	<<</Tuning-		<< / Tune-				
	Play		Play / Slow				
	>>/Tuning+		>> / Tune+				
	Stop		Stop / Hold				

