



Originale		Sostituto		Originale		Sostituto	
	Picture Mode		Picture / Format		CH+ / Tracking/V-Lock+		CH+ / Page+
	DVD Status		Info / Angle		Cancel / Reset		Exit / Cancel / Clear
	Dubbing		Yellow / YouTube / Repeat		-/-- / >=10		Guide / EPG / -/--
	VHS/DVD		Smart / List		Play		Play / Slow
	Quick Replay		Red / Netflix / Search		Up		Up
	Group		Zoom / Size		Left		Left
	P.Memory		Fav / Marker / PC		Enter		OK
	Return		Back / Return		Right		Right
	AV Enhancer		AV / Input / RDS		Down		Down
	Direct Navigator / Top Menu		D.Menu / Top		Display		Display / Media
	Play List / Menu		Menu / Home		Setup		Setup / OPT /
	Play Mode		Shift + Play /		Timer		Sleep / Timer
	REW / << Slow/Search		<< / Tune-		0		0
	FF / Slow/Search		>> / Tune+		Audio		Audio / Lang I/II
	VHS/DVD Power		Power		1		1
	Pause / Slow		Pause / Step / Freeze		2		2
	CH- / Tracking/V-Lock-		CH- / Page-		3		3

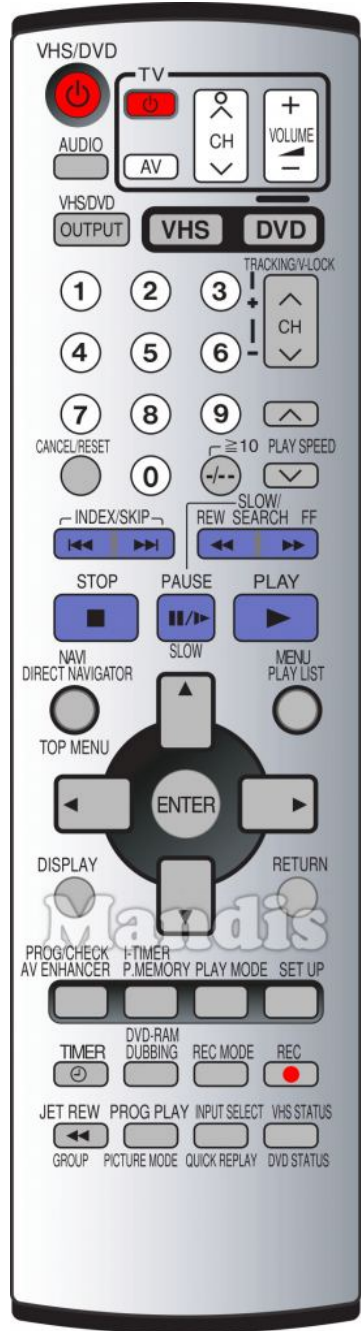



Originale		Sostituto		Originale		Sostituto	
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX-HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
INDEX/SKIP	I<< Skip	PRESET-	I<< / Preset-				
SKIP	Skip >>I	PRESET+	>>I / Preset+				
STOP	Stop	HOLD	Stop / Hold				




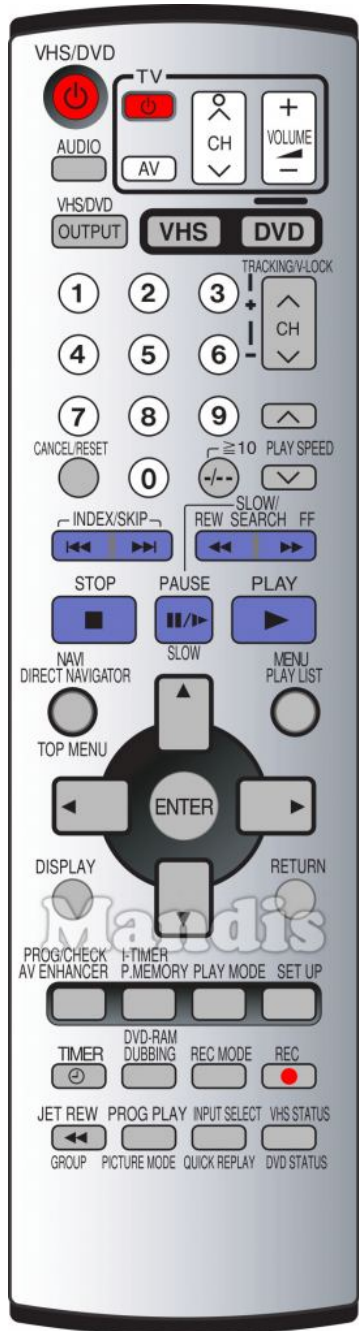


 
 


Originale	Sostituto
Prog Play	Shift + Play /
I-Timer	Shift + Sleep / Timer
Cancel / Reset	Exit / Cancel / Clear
VHS/DVD	Smart / List
Display	Display / Media
VCR Status	Info / Angle
Dubbing	Yellow / YouTube / Repeat
Jet Rew	Shift + << /
Pause / Slow	Pause / Step / Freeze
CH+ / Tracking/V-Lock+	CH+ / Page+
CH- / Tracking/V-Lock-	CH- / Page-
VHS/DVD Power	Power
-/-- / >=10	Guide / EPG / -/--
Return	Back / Return
Prog/Check	TV/Radio /
I<< Index	I<< / Preset-
Index >>I	>>I / Preset+


Originale	Sostituto
FF	>> / Tune+
Play	Play / Slow
Menu	Menu / Home
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Stop	Stop / Hold
Rec Mode	Shift + Rec / Rec Mode
Timer	Sleep / Timer
Rec	Rec / Rec Mode
0	0
Audio	Audio / Lang I/II
1	1
2	2
3	3

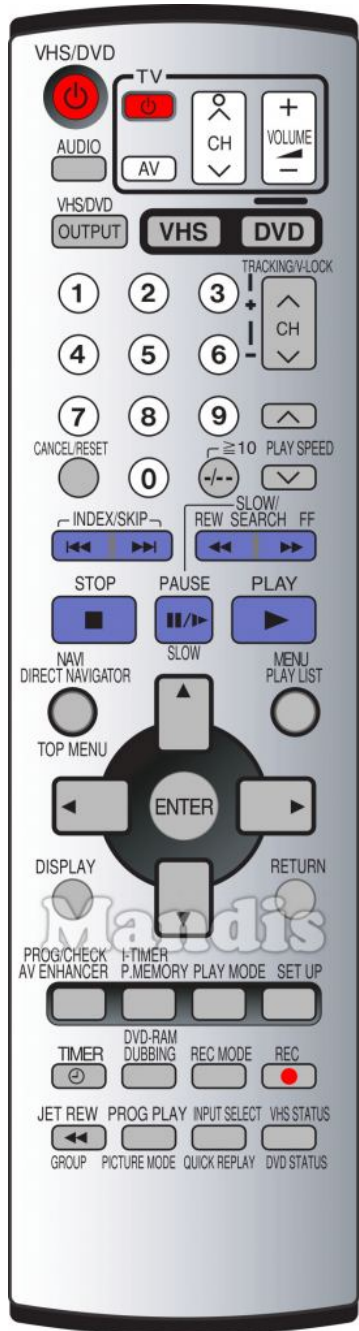



	Originale	Sostituto	Originale	Sostituto
	4			
	5			
	6			
	7			
	8			
	9			
	Input Select			
	REW			



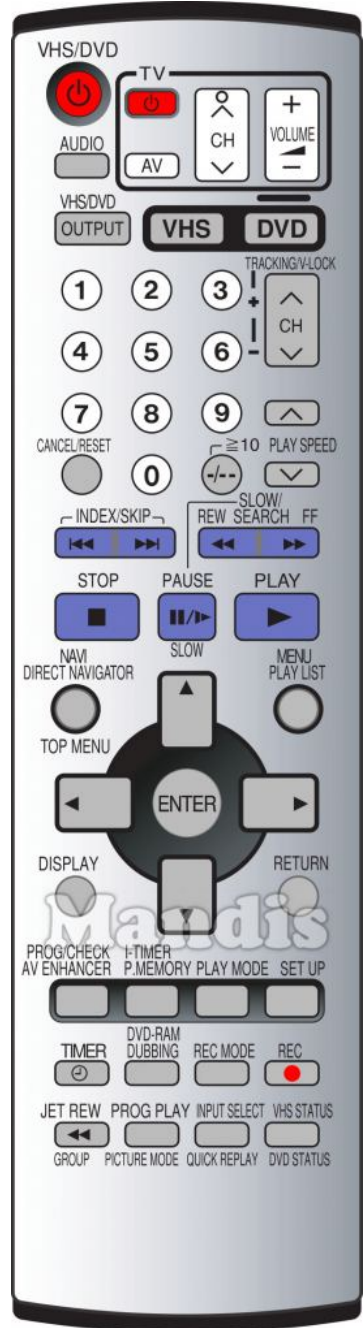

Originale	Sostituto	Originale	Sostituto
Power	Power		
AV	AV / Input / RDS		
Volume+	Vol+		
Volume-	Vol-		
CH+	CH+ / Page+		
CH-	CH- / Page-		

