
 












 












 



 



















Originale	Sostituto
 Power	 Power
 Sleep	 Sleep / Timer
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 Enter	 OK
 Folder+	 CH+ / Page+
 Folder-	 CH- / Page-
 Disc Skip	 Picture / Format
 EQ	 Subtitle / EQ
 Clear	 Exit / Cancel / Clear
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>	 >> / Tune+
 <<	 << / Tune-
 >>I+	 Right

Originale	Sostituto
 I<<-	 Left
 Function	 Menu / Home
 Band/Tuner	 6
 CD	 3
 USB	 8
 Play Mode/Tuning Mode	 Eject / Surround
 Repeat/FM	 Text / Goto
 Tuner Memory	 Smart / List
 Clock/Timer	 Guide / EPG / -/--
 Clock/Timer SET	 Fav / Marker / PC

