

 









 

 










 








 



 


 
 
 
 
 







Originale	Sostituto
 Power CD	 Power
 Eject CD	 AV / Input / RDS
 Vol+	 Vol+
 Vol-	 Vol-
 >>/Album+ CD	 Blue / Prime Video / Random
 <</Album- CD	 Green / APP / Repeat
 >  CD	 Right
  < CD	 Left
 Play/Pause	 Play / Slow
 Stop	 Stop / Hold
 CD	 3
 Tuner	 6
 AUX	 7
 Timer	 Shift + Sleep / Timer
 Sleep	 Sleep / Timer
 Clock/Display	 Display / Media
 Program CD	 Picture / Format

Originale	Sostituto
 DBB	 Guide / EPG / -/-
 DSC	 0
 RDS	 Shift + AV / Input / RDS
 Mute	 Mute / Dimmer
 Repeat	 Shift + Green / APP / Repeat
 Shuffle	 Shift + Blue / Prime
 Power Tuner	 Shift + Power
 >>/Album+	 Up
 <</Album-	 Down
 >  Tuner	 Shift + Right
  < Tuner	 Shift + Left
 Program Tuner	 Sound / Title
 Eject AUX	 Eject / Surround
 Power AUX	 OK

