







 

 



























Originale	Sostituto
 Power	 Power
 Menu PBC	 Menu / Home
 Title	 Sound / Title
 Open / Close	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10/0	 0
 10+	 Guide / EPG / -/--
 Clear	 Fav / Marker / PC
 Display	 Display / Media

Originale	Sostituto
 Subtitle	 Subtitle / EQ
 Slow	 Pause / Step / Freeze
 Program	 TV/Radio /
 USB	 Picture / Format
 Audio	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Repeat	 Green / APP / Repeat
 Setup	 Yellow / YouTube / Repeat
 Up	 Up
 Zoom	 Text / Goto
 Play / Pause	 Play / Slow
 Left	 Left
 Enter	 OK
 Right	 Right
 Stop	 Stop / Hold
 SRC	 Back / Return
 Down	 Down





Originale	Sostituto	Originale	Sostituto
	<<		<< / Tune-
	>>		>> / Tune+
	Vol-		Vol-
	Vol+		Vol+
	I<<		I<< / Preset-
	>>I		>>I / Preset+

