







 
 












 



 





 
















Originale	Sostituto
 Power	 Power
 CD	 Shift + 3
 Tape	 Shift + 5
 Tuner	 Shift + 6
 VID 1	 Shift + 1
 VID 2	 Shift + 2
 VID 3	 Shift + 4
 Red/Format	 Red / Netflix / Search
 Green/Sound	 Green / APP / Repeat
 Yellow/[]	 Yellow / YouTube / Repeat
 Blue/Timer	 Blue / Prime Video / Random
 Violet/PC	 TV/Radio /
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right	 Right

Originale	Sostituto
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/--	 0









 





























 
 
 
 


















Originale		Sostituto		Originale		Sostituto	
	AV		AV / Input / RDS				
	<</REW		<< / Tune-				
	Play		Play / Slow				
	>>/F.FWD		>> / Tune+				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				





Originale	Sostituto	Originale	Sostituto
Power		Power	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0/--		0	
AV		AV / Input / RDS	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
PR+		CH+ / Page+	
PR-		CH- / Page-	







Originale	Sostituto	Originale	Sostituto
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
Up		Up	
Down		Down	
Left		Left	
Right		Right	
OK		OK	
Red/Format		Red / Netflix / Search	
Green/Sound		Green / APP / Repeat	
Yellow/[]		Yellow / YouTube / Repeat	
Blue/Timer		Blue / Prime Video / Random	
Violet/PC		TV/Radio /	
Stop		Stop / Hold	
Pause		Pause / Step / Freeze	
CD		Shift + 3	
VID 1		Eject / Surround	
Tape		Shift + 5	





Originale

Sostituto











 

 













VID 2		Subtitle / EQ
Tuner	 + 	Shift + 6
VID 3		Back / Return
Play		Play / Slow
>>/F.FWD		>> / Tune+
<</REW		<< / Tune-
Rec		Rec / Rec Mode















 

 
















 
Originale

Sostituto















Originale	Sostituto	Originale	Sostituto
Power		Power	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0/--		0	
AV		AV / Input / RDS	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
PR+		CH+ / Page+	
PR-		CH- / Page-	

Originale	Sostituto	Originale	Sostituto
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
Down		Down	
Up		Up	
Left		Left	
Right		Right	
OK		OK	
Red/Format		Red / Netflix / Search	
Green/Sound		Green / APP / Repeat	
Yellow/[]		Yellow / YouTube / Repeat	
Blue/timer		Blue / Prime Video / Random	
Violet/PC		TV/Radio /	
Stop		Stop / Hold	
Pause		Pause / Step / Freeze	
Play		Play / Slow	
>>/F.FWD		>> / Tune+	
<</REW		<< / Tune-	






































Originale	Sostituto
Rec	 Rec / Rec Mode
CD	 +  Shift + 3
VID 1	 Eject / Surround
Tape	 +  Shift + 5
VID 2	 Subtitle / EQ
Tuner	 +  Shift + 6
VID 3	 Back / Return

Originale	Sostituto





Originale	Sostituto	Originale	Sostituto
Power		Power	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0/--		0	
AV		AV / Input / RDS	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
PR+		CH+ / Page+	
PR-		CH- / Page-	

Originale	Sostituto	Originale	Sostituto
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
OK		OK	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
Red/Format		Red / Netflix / Search	
Green/Sound		Green / APP / Repeat	
Yellow/[]		Yellow / YouTube / Repeat	
Blue/Timer		Blue / Prime Video / Random	
Violet/PC		TV/Radio /	
Play		Play / Slow	
>>/F.FWD		>> / Tune+	
<</REW		<< / Tune-	
Rec		Rec / Rec Mode	
Stop		Stop / Hold	





Originale	Sostituto
Pause	Pause / Step / Freeze
CD	+ Shift + 3
VID 1	Eject / Surround
Tape	+ Shift + 5
VID 2	Subtitle / EQ
Tuner	+ Shift + 6
VID 3	Back / Return

Originale	Sostituto

