











 

 





 





 

 

 

 





 



Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info / Angle
 Recall	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 FAV	 Fav / Marker / PC

Originale	Sostituto
 SAT	 Shift + 0
 Tv/Radio	 TV/Radio /
 Guide	 Guide / EPG / -/--
 Freeze	 Pause / Step / Freeze
 AUX In	 AV / Input / RDS
 UHF	 Display / Media
 Audio	 Audio / Lang I/II
 Red	 Red / Netflix / Search
 Yellow	 Yellow / YouTube / Repeat
 Green	 Green / APP / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Positioner	 Setup / OPT /
 Audio R/L	 D.Menu / Top
 OK	 OK
 Up	 Up
 Down	 Down





Originale	Sostituto
 Right	 Right
 Left	 Left

Originale	Sostituto

