
 
 
 
 
 
 
 
 
 
 
 
 
 

 



 
 
 




Originale	Sostituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	TTX/MIX
	PRE-CH
	Mute
	CH List
	Vol+

Originale	Sostituto
	Vol-
	PR+
	PR-
	Media.P
	Menu
	HDMI
	Tools
	Info
	Return
	Exit
	Up
	Down
	Left
	Right
	Enter
	Red/A
	Green/B



