 



 



 



 



 

 


























 

 


 

 



 









Originale		Sostituto		Originale		Sostituto	
	Power		Power		10		Guide / EPG / -/-
	Sleep		Sleep / Timer		+10		Fav / Marker / PC
	CD 1		Shift + 1		Auto Preset		Setup / OPT /
	CD 2		Shift + 2		Repeat		Green / APP / Repeat
	CD 3		Shift + 3		Program		Shift + TV/Radio / Program
	Eject CD 1		Shift + 4		Random		Blue / Prime Video / Random
	Eject CD 2		Shift + 5		Continue		Picture / Format
	Eject CD 3		Shift + 6		AUX		Shift + 7
	1		1		FM/AM		TV/Radio /
	2		2		CD Play/Pause		Play / Slow
	3		3		I<<		I<< / Preset-
	4		4		Stop/Clear		Stop / Hold
	5		5		>>I		>>I / Preset+
	6		6		Clock		Zoom / Size
	7		7		Timer		Shift + Sleep / Timer
	8		8		Stereo/Auto/Mono		Info / Angle
	9		9		Display		Display / Media





Originale	Sostituto	Originale	Sostituto
 Sound	 Sound / Title		
 Active Bass EX.	 Mute / Dimmer		
 Vol-	 Vol-		
 Vol+	 Vol+		

