 







 



 



 



 



 



 



 



 


 
 


 
 



 



 

 

 

 
 


 









Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	TV		TV/Radio /		PR+		CH+ / Page+
	1		1		PR-		CH- / Page-
	2		2		CH-List		Display / Media
	3		3		Menu		Menu / Home
	4		4		FAV-CH		Fav / Marker / PC
	5		5		Tools		Setup / OPT /
	6		6		Info		Info / Angle
	7		7		Return		Shift + Back / Return
	8		8		Exit		Exit / Cancel / Clear
	9		9		Up		Up
	0		0		Down		Down
	Alarm		Smart / List		Left		Left
	Pre-CH		Back / Return		Right		Right
	Mute		Mute / Dimmer		Enter		OK
	Source		AV / Input / RDS		Red		Red / Netflix / Search
	Vol+		Vol+		Green		Green / APP / Repeat





Originale		Sostituto	
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TXT/MIX		Text / Goto
	SRS		Picture / Format
	P.Size		Zoom / Size
	Dual/I/II		Audio / Lang I/II
	Guide		Guide / EPG / -/--
	SUBT.		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Originale		Sostituto	

