

 



























 



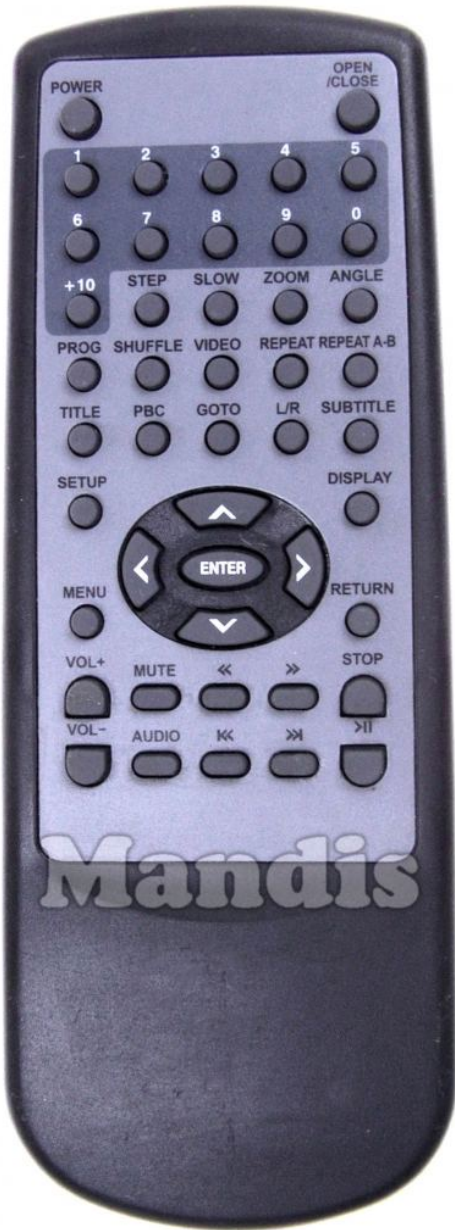




Originale	Sostituto
 Power	 Power
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 Step	 Shift + Pause / Step /
 Slow	 Shift + Play /
 Zoom	 Zoom / Size
 Angle	 Info / Angle

Originale	Sostituto
 Prog	 TV/Radio /
 Shuffle	 Blue / Prime Video / Random
 Video	 Smart / List
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Title	 Sound / Title
 PBC	 Picture / Format
 Goto	 Text / Goto
 L/R	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 Setup	 Setup / OPT /
 Up	 Up
 Display	 Display / Media
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home




Originale
Sostituto

	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Vol-		Vol-
	Audio		Audio / Lang I/II
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze

Originale
Sostituto

