



Originale	Sostituto
Power	Power
TV	Shift + 1
DVD	Shift + 2
Scart	Shift + 3
VGA	Shift + 4
P.M.	Picture / Format
S.M.	Sound / Title
Set Fav	Shift + Fav / Marker / PC
Display	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Originale	Sostituto
9	9
0	0
Fav	Fav / Marker / PC
Recall / +10	Back / Return
Stereo / Audio	Audio / Lang I/II
Vol+	Vol+
CH+	CH+ / Page+
Scan	Smart / List
Mute	Mute / Dimmer
Vol-	Vol-
CH-	CH- / Page-
Subtitle	Subtitle / EQ
Exit	Exit / Cancel / Clear
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK



