



Originale	Sostituto
 Power	 Power
 Power USB/Audio	 Smart / List
 Open/Close	 Eject / Surround
 Power CD/FM	 Shift + Power
 CD/FM	 3
 Dock	 Green / APP / Repeat
 USB/Audio In	 8
 Preset/Album Up USB/Audio In	 CH+ / Page+
 Preset/Album Up	 Up
 Preset/Album Up CD/FM	 Shift + Up
 Preset/Album Down USB/Audio	 CH- / Page-
 Preset/Album Down CD/FM	 Down
 Preset/Album Down CD/FM	 Shift + Down
 I<< USB/Audio In	 Shift + I<< / Preset-
 I<<	 I<< / Preset-
 I<< CD/FM	 Left
 >>I USB/Audio In	 Shift + >>I / Preset+

Originale	Sostituto
 >>I	 >>I / Preset+
 >>I CD/FM	 Right
 OK USB/Audio	 5
 OK	 OK
 OK CD/FM	 Shift + OK
 Play USB/Audio In	 Shift + Play /
 Play/Pause CD/FM	 Pause / Step / Freeze
 Play/Pause	 Play / Slow
 Vol+	 Vol+
 Vol-	 Vol-
 Menu USB/Audio	 Shift + Display / Media
 Stop USB/Audio In	 >> / Tune+
 Stop CD/FM	 Shift + Stop /
 Menu CD/FM	 D.Menu / Top
 Stop	 Stop / Hold
 Menu	 Menu / Home
 Display	 Display / Media



