



Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	HDD/Music Collection		Red / Netflix / Search		Cancel		Exit / Cancel / Clear
	DVD		Shift + 2		+10/-/--		Guide / EPG / -/--
	Tuner		Shift + 6		Select >		CH+ / Page+
	Power Tv		Shift + Power		< Select		CH- / Page-
	TV/AV Tv		Shift + AV / Input / RDS		Vol+		Vol+
	Vol+ Tv		Shift + Right		Vol-		Vol-
	Vol- Tv		Shift + Left		I<< Skip		I<< / Preset-
	1		1		Skip >>I		>>I / Preset+
	2		2		<< Slow Search		<< / Tune-
	3		3		Slow Search >>		>> / Tune+
	4		4		Stop		Stop / Hold
	5		5		Pause		Pause / Step / Freeze
	6		6		Play		Play / Slow
	7		7		Menu/Play List		Menu / Home
	8		8		Functions		Info / Angle
	9		9		Sub Menu		Subtitle / EQ





Originale	Sostituto
Return	Back / Return
Top Menu/Disc Navigator	Smart / List
One Touch Play	Display / Media
Start	AV / Input / RDS
Up	Up
Down	Down
Left	Left
Right	Right
Enter	OK
Play Energetic	Shift + 1
Play Mellow	Shift + Play /
Play Relaxing	Shift + 3
Play Emotional	Shift + 4
HDD Rec	Rec / Rec Mode
CH Select	Picture / Format
REG/Favourite	Fav / Marker / PC
Quick OSD	Text / Goto

Originale	Sostituto
Play Mode	Zoom / Size
FL Display	TV/Radio /
Sleep	Sleep / Timer
[I]VS	Shift + TV/Radio / Program
Setup	Setup / OPT /
Sound	Sound / Title
Select	Shift + OK
Muting	Mute / Dimmer

