

 







 



 

 

 



















Originale	Sostituto
	 Power
	 AV / Input / RDS
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Text / Goto
	 Back / Return
	 Mute / Dimmer
	 Shift + Smart / List
	 Vol+

Originale	Sostituto
	 Vol-
	 CH+ / Page+
	 CH- / Page-
	 Menu / Home
	 Smart / List
	 Guide / EPG / -/--
	 Setup / OPT /
	 Info / Angle
	 Shift + Back / Return
	 Exit / Cancel / Clear
	 Up
	 Down
	 Left
	 Right
	 OK
	 Red / Netflix / Search
	 Green / APP / Repeat





Originale	Sostituto	Originale	Sostituto
 C Yellow	 Yellow / YouTube / Repeat		
 D Blue	 Blue / Prime Video / Random		
 E-Manual	 TV/Radio /		
 3D	 Zoom / Size		
 AD/Subt.	 Subtitle / EQ		
 Stop	 Stop / Hold		
 <</ <<	 << / Tune-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >>/>>	 >> / Tune+		

Originale	Sostituto

