

 

 


 

 



 

 
 



 

 

 

 

 

 

 



 

 

 

 

 





Originale	Sostituto
 Power	 Power
 Timer	 Sleep / Timer
 Rec	 Rec / Rec Mode
 Mute	 Mute / Dimmer
 [●]	 ZOOM
 */Setup	 OPT-TOOLS / SETUP
 EPG/Guide	 GUIDE / EPG / -/-
  	 PICTURE
 Π/Mode	 AUDIO
 [:::] / KB	 MEDIA / DISPLAY
 FAV	 FAV MARKER
 APP	 APP / REPEAT
 TV	 PROGRAM / TV / RADIO
 F1	 NETFLIX / SEARCH
 F2	 SHIFT + APP / REPEAT
 F3	 YouTube / REPEAT A-B
 F4	 Prime Video / RANDOM

Originale	Sostituto
 MENU	 HOME / MENU
 BACK	 RETURN / BACK
 EXIT	 CLEAR / EXIT / CANCEL
 INFO	 ANGLE / INFO
	
	
	
	
 OK	 OK
 CHANNEL / +	 CH PAGE / +
 CHANNEL / -	 CH PAGE / -
	 PRESET- / I<<
	 PRESET+ / >>
