



Originale		Sostituto		Originale		Sostituto	
	Index		Play / Slow		6		6
	Red / -1		Red / Netflix / Search		Contrast-		<< / Tune-
	Green / Timer /		Green / APP / Repeat		Contrast+		>> / Tune+
	Yellow / Stop		Yellow / YouTube / Repeat		7		7
	Blue / Reveal		Blue / Prime Video / Random		8		8
	[≡]]]		Rec / Rec Mode		9		9
	Cancel		Exit / Cancel / Clear		Brightness-		I<< / Preset-
	Size		Zoom / Size		Brightness+		>>I / Preset+
	TV		TV/Radio /		P/C		Back / Return
	Text		Text / Goto		0		0
	1		1		AV		AV / Input / RDS
	2		2		←•→		Display / Media
	3		3		**		Smart / List
	Tint-		Shift + Left		PIP		Picture / Format
	Tint+		Shift + Right		i		Info / Angle
	4		4		i		Menu / Home
	5		5		----		Subtitle / EQ





Originale	Sostituto	Originale	Sostituto
	Up / P+		Up
	Up / P+		CH+ / Page+
	Mute		Mute / Dimmer
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	AUX	+ 7	Shift + 7
	Down / P-		Down
	Down / P-		CH- / Page-
	Power		Power

 



 

 

 




 








 











 

 



























Originale	Sostituto	Originale	Sostituto
	<< / Preset-		
	>> / Preset+		
	Rec / Rec Mode		
	Stop / Hold		
	<< / Tune-		
	>> / Tune+		
	Pause / Step / Freeze		
	Play / Slow		
	CH+ / Page+		
	CH- / Page-		
	Power		





Originale		Sostituto		Originale		Sostituto	
	Red		Red / Netflix / Search		*+		>> / Preset+
	Green/Timer		Green / APP / Repeat		P/C		Back / Return
	Yellow		Yellow / YouTube / Repeat		0		0
	Blue		Blue / Prime Video / Random		PIP		Picture / Format
	TXT		Text / Goto		i		Info / Angle
	1		1		P+		CH+ / Page+
	2		2		Up		Up
	3		3		Mute		Mute / Dimmer
	4		4		Left		Left
	5		5		Vol-		Vol-
	6		6		OK		OK
	-0		<< / Tune-		Right		Right
	0+		>> / Tune+		Vol+		Vol+
	7		7		AUX		Shift + 7
	8		8		P-		CH- / Page-
	9		9		Down		Down
	-*		<< / Preset-		Power		Power

