





 

 


 

 


 

 



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV	TV/Radio /
Radio	Shift + TV/Radio / Program
Menu	Menu / Home
Exit	Exit / Cancel / Clear
P+	Shift + CH+ / Page+

Originale	Sostituto
P+	>>  / Preset+
P-	Shift + CH- /
P-	<< / Preset-
Up	Up
Down	Down
Right	Right
Left	Left
Up	CH+ / Page+
Down	CH- / Page-
OK	OK
Right	Vol+
Fav	Fav / Marker / PC
Left	Vol-
Info	Info / Angle
Lang / Red	Red / Netflix / Search
Lang / Red	Audio / Lang I/II
Pause / Blue	Blue / Prime Video / Random



Page+



Originale	Sostituto
 Pause / Blue	 Pause / Step / Freeze
 Sound / Green	 Green / APP / Repeat
 Sound / Green	 Sound / Title
 Text / Yellow	 Yellow / YouTube / Repeat
 Text / Yellow	 Text / Goto
 SAT	 Shift + 0
 SAT	 Smart / List
 Recall	 Back / Return
 TV / SAT	 Display / Media
 EPG	 Guide / EPG / -/--

Originale	Sostituto

