



 




Originale	Sostituto
 Power	 Power
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit / Cancel / Clear
 <<	 << / Tune-
 >>	 >> / Tune+
 <<	 << / Preset-
 >>	 >> / Preset+

Originale	Sostituto
 Play	 Play / Slow
 Pause/Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 DVD Menu	 D.Menu / Top
 Title	 Sound / Title
 Up	 Up
 Enter	 OK
 Down	 Down
 Right	 Right
 Left	 Left
 Return	 Back / Return
 Display	 Display / Media
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Setup	 Setup / OPT /
 Marker	 Fav / Marker / PC





Originale		Sostituto	
- SEARCH	Search	NETFLIX SEARCH	Red / Netflix / Search
PROGRAM	Program	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
RESOLUTION	Resolution	PROGRAM TV/RADIO	TV/Radio /
*	*	Prime Video RANDOM	Blue / Prime Video / Random
TV POWER	Power Tv	SHIFT + TV POWER	Shift + Power
AV	AV Tv	RDS AV INPUT	AV / Input / RDS
PR/CH +	PR/CH+ Tv	+ CH PAGE	CH+ / Page+
PR/CH -	PR/CH- Tv	- CH PAGE	CH- / Page-
VOL +	Vol+ Tv	+ VOL	Vol+
VOL -	Vol- Tv	- VOL	Vol-

Originale	Sostituto

