



















 




















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Play	 Play / Slow
 Open/Close	 Eject / Surround	 Pause/Step	 Pause / Step / Freeze
 1	 1	 Stop	 Stop / Hold
 2	 2	 DVD Menu	 D.Menu / Top
 3	 3	 Title	 Sound / Title
 4	 4	 Up	 Up
 5	 5	 Enter	 OK
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 Return	 Back / Return
 0	 0	 Display	 Display / Media
 Clear	 Exit / Cancel / Clear	 Audio	 Audio / Lang I/II
 <<	 << / Tune-	 Subtitle	 Subtitle / EQ
 >>	 >> / Tune+	 Angle	 Info / Angle
 <<	 << / Preset-	 Setup	 Setup / OPT /
 >>	 >> / Preset+	 Marker	 Fav / Marker / PC

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 TV	 DVD
 Open/Close	 Eject / Surround	 Play / Slow	 Play / Slow
 1	 1	 Pause/Step	 Pause / Step / Freeze
 2	 2	 Stop	 Stop / Hold
 3	 3	 DVD Menu	 D.Menu / Top
 4	 4	 Title	 Sound / Title
 5	 5	 Up	 Up
 6	 6	 Enter	 OK
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Return	 Back / Return
 Clear	 Exit / Cancel / Clear	 Display	 Display / Media
 <<	 << / Tune-	 Audio	 Audio / Lang I/II
 >>	 >> / Tune+	 Subtitle	 Subtitle / EQ
 <<	 << / Preset-	 Angle	 Info / Angle
 >>	 >> / Preset+	 Setup	 Setup / OPT /
 Marker	 Fav / Marker / PC	 Marker	 Fav / Marker / PC





Originale	Sostituto
Search	Red / Netflix / Search
Program	Shift + TV/Radio / Program
Zoom	Zoom / Size
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Resolution	TV/Radio /
*	Blue / Prime Video / Random
Power Tv	Shift + Power
AV Tv	AV / Input / RDS
PR/CH+ Tv	CH+ / Page+
PR/CH- Tv	CH- / Page-
Vol+ Tv	Vol+
Vol- Tv	Vol-

Originale	Sostituto

