



Originale	Sostituto
Power	Power
Open/Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Exit / Cancel / Clear
<<<	<<< / Tune-
>>>	>>> / Tune+
<<<	<<< / Preset-
>>>	>>> / Preset+

Originale	Sostituto
Play	Play / Slow
Pause/Step	Pause / Step / Freeze
Stop	Stop / Hold
DVD Menu	D.Menu / Top
Title	Sound / Title
Up	Up
Enter	OK
Down	Down
Right	Right
Left	Left
Return	Back / Return
Display	Display / Media
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle
Setup	Setup / OPT /
Marker	Fav / Marker / PC





Originale	Sostituto	Originale	Sostituto
 Search	 Red / Netflix / Search		
 Program	 Shift + TV/Radio / Program		
 Zoom	 Zoom / Size		
 Repeat	 Green / APP / Repeat		
 A-B	 Yellow / YouTube / Repeat		
 Resolution	 TV/Radio /		
 Karaoke ECHO	 Blue / Prime Video / Random		
 Power Tv	 Shift + Power		
 AV Tv	 AV / Input / RDS		
 PR/CH+ Tv	 CH+ / Page+		
 PR/CH- Tv	 CH- / Page-		
 Vol+ Tv	 Vol+		
 Vol- Tv	 Vol-		

