
 


















 












 






 

















Originale	Sostituto
 Power	 Power
 ambilight	 TV/Radio /
 prime video	 Shift + Blue / Prime
 Windows	 Display / Media
 Netflix	 Shift + Red / Netflix /
 Rakuten Tv	 Shift + Yellow / YouTube /
 Menu	 D.Menu / Top
 Smart Tv	 Smart / List
 Pair/Sources	 AV / Input / RDS
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 ←	 Back / Return
 Home	 Menu / Home
 List/Tv Guide	 Guide / EPG / -/-

Originale	Sostituto
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Exit/Tv	 Exit / Cancel / Clear
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1





Originale		Sostituto		Originale		Sostituto	
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
0	0	HDMI - BAT 0	0				
TEXT	Text	GOTO TEXT	Text / Goto				
+ OPTIONS	+ Options	OPT-TOOLS SETUP	Setup / OPT /				

