























 





 









Originale	Sostituto
	 Power
	 Yellow / YouTube / Repeat
	 Exit / Cancel / Clear
	 Eject / Surround
	 Sleep / Timer
	 Shift + Pause / Step /
	 TV/Radio /
	 Mute / Dimmer
	 1
	 2
	 3
	 Audio / Lang I/II
	 4
	 5
	 6
	 Subtitle / EQ
	 7

Originale	Sostituto
	 8
	 9
	 Zoom / Size
	 0
	 Guide / EPG / -/-
	 Blue / Prime Video / Random
	 Display / Media
	 Back / Return
	 Green / APP / Repeat
	 Menu / Home
	 Vol+
	 Info / Angle
	 Shift + Eject / Surround
	 Shift + Play /
	 Vol-
	 Setup / OPT /
	 Up



