







 











 




 












Originale	Sostituto	Originale	Sostituto
 On/Off	 Power	 Mute	 Mute / Dimmer
 1	 1	 2	 2
 3	 3	 4	 4
 5	 5	 6	 6
 7	 7	 8	 8
 9	 9	 0	 0
 Tv Guide	 Guide / EPG / -/-	 Recall	 Shift + Back / Return
 Picture	 Picture / Format	 Sound	 Sound / Title
 Source	 AV / Input / RDS		

Originale	Sostituto	Originale	Sostituto
 Vol+	 Vol+	 Vol-	 Vol-
 CH+	 CH+ / Page+	 CH-	 CH- / Page-
 Menu	 Menu / Home	 Exit	 Exit / Cancel / Clear
 Back	 Back / Return	 Fav	 Fav / Marker / PC
 Up	 Up	 Down	 Down
 Left	 Left	 Right	 Right
 OK	 OK	 Info	 Info / Angle
 Text	 Text / Goto	 Subtitle	 Subtitle / EQ
 TV	 TV/Radio /		



