


































































 



Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 OK
Mute	 Mute / Dimmer	Menu Right	 Right
Update	 Play / Slow	Menu Off	 Exit / Cancel / Clear
Reveal	 Pause / Step / Freeze	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Info	 Info / Angle	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	Menu audio	 Audio / Lang I/II
Txt Expand	 Zoom / Size	1	 1
Text	 Text / Goto	2	 2
TV/AV	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Display	 Display / Media	5	 5
Menu Up	 Up	6	 6
Menu Left	 Left	7	 7






 

 



 



 

 



 







 










 
 
 



 

 
 

 



 


Originale	Sostituto	Originale	Sostituto
8			
9			
Guide -/-- 1.	 Guide / EPG / -/--		
0/10			
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Tone+	 >> / Tune+		
Store Text	 +  Shift + Text /		
Blue	 Blue / Prime Video / Random		
Audio+	 >> / Preset+		
AV 2	 +  Shift + AV / Input / RDS		
Surround	 Eject / Surround		
Nicam/Mono	 Sound / Title		



Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Off	 Exit / Cancel / Clear
Update	 Play / Slow	Menu Down	 Down
Reveal	 Pause / Step / Freeze	Back	 Back / Return
Txt Stop	 Stop / Hold	Volume+	 Vol+
Info	 Info / Angle	Chan.Up	 CH+ / Page+
Subt.List	 Subtitle / EQ	Menu audio	 Audio / Lang I/II
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Text	 Text / Goto	Chan.Down	 CH- / Page-
Txt Expand	 Zoom / Size	1	 1
Return TV	 TV/Radio /	2	 2
TV/AV	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Menu Up	 Up	5	 5
Display	 Display / Media	6	 6
Menu Left	 Left	7	 7
OK Enter	 OK	8	 8



Originale	Sostituto	Originale	Sostituto
9	 9	Color+ P.Std	 Picture / Format
Guide -/-- 1.	 Guide / EPG / -/--	AV 2	 Shift + AV / Input / RDS
0/10	 0	Bright+ Mode	 Shift + Menu /
2.Fav P/C 2.	 Fav / Marker / PC	Search	 Shift + Up
Red	 Red / Netflix / Search	Disp	 Shift + Display / Media
Green	 Green / APP / Repeat	Tune-	 Shift + Left
Yellow	 Yellow / YouTube / Repeat	Aft/Caf	 Shift + OK
Blue	 Blue / Prime Video / Random	Tune+	 Shift + Right
Game Coo	 D.Menu / Top	Bright- Sys	 Shift + Exit / Cancel / Clear
Audio-	 << / Tune-	Store	 Shift + Down
Off/Tim	 Setup / OPT /	Browse	 Shift + Back / Return
Rotate Text	 Shift + Eject / Surround	Input	 Shift + Vol+
Tone-	 I<< / Preset-	Color- S.Std	 Sound / Title
Audio+	 >> / Tune+	Contrast+	 Shift + CH+ /
Mix Scan	 Smart / List	Output	 Shift + Vol-
Store Text	 Shift + Text /	Contrast-	 Shift + CH- /
Tone+	 >>I / Preset+	On Pip	 Shift + 1

Originale	Sostituto	Originale	Sostituto
Color+ P.Std	 Picture / Format	Color- S.Std	 Sound / Title
AV 2	 Shift + AV / Input / RDS	Contrast+	 Shift + CH+ /
Bright+ Mode	 Shift + Menu /	Output	 Shift + Vol-
Search	 Shift + Up	Contrast-	 Shift + CH- /
Disp	 Shift + Display / Media	On Pip	 Shift + 1
Tune-	 Shift + Left		
Aft/Caf	 Shift + OK		
Tune+	 Shift + Right		
Bright- Sys	 Shift + Exit / Cancel / Clear		
Store	 Shift + Down		
Browse	 Shift + Back / Return		
Input	 Shift + Vol+		
Color- S.Std	 Sound / Title		
Contrast+	 Shift + CH+ /		
Output	 Shift + Vol-		
Contrast-	 Shift + CH- /		
On Pip	 Shift + 1		



Originale	Sostituto	Originale	Sostituto
Swap	SHIFT + DVD 2 Shift + 2		
Rotate Pip	SHIFT + CD - STB 3 Shift + 3		
Still	SHIFT + VIDEO 4 Shift + 4		
Dim Pip	SHIFT + TAPE 5 Shift + 5		
Help	SHIFT + TUNER 6 Shift + 6		
Camera	SHIFT + AUX - HDD 7 Shift + 7		
Nicam/Mono	SHIFT + LANG I/II AUDIO Shift + Audio / Lang I/II		
Surround	SURROUND Eject / Surround		
Camera1	SHIFT + USB 8 Shift + 8		
Clear	SHIFT + BLUETOOTH 9 Shift + 9		
3.*	SHIFT + GUIDE EPG Shift + Guide / EPG / -/-		
View	SHIFT + HDMI - SAT 0 Shift + 0		
4.# 16:9	SHIFT + PC FAV MARKER Shift + Fav / Marker / PC		
Level L	SHIFT + YouTube REPEAT A-B Shift + Yellow / YouTube /		
Level R/Woofers	SHIFT + Prime Video RANDOM Shift + Blue / Prime		

