




 





















 





 




Originale	Sostituto
 On	 Power
 Standby	 Shift + Power
 Search	 Red / Netflix / Search
 Computer	 Shift + Fav / Marker / PC
 BNC	 Shift + 8
 DisplayPort	 Shift + Guide / EPG / -/-
 Video	 Shift + 4
 S-Video	 Shift + 5
 HDMI	 Shift + 0
 LAN	 Shift + 6
 HDBaseT	 Shift + 7
 SDI	 Shift + 9
 Auto	 Smart / List
 Aspect	 Picture / Format
 Color Mode	 Setup / OPT /
 Test Pattern	 Text / Goto
 Freeze	 Pause / Step / Freeze

Originale	Sostituto
 AV Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Esc	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Split	 Info / Angle
 Default	 Back / Return
 Page Up	 CH+ / Page+
 Vol+	 Vol+
 E-Zoom+	 >>I / Preset+
 Page Down	 CH- / Page-
 Vol-	 Vol-
 E-Zoom-	 I<< / Preset-
 User 1	 Shift + 1





Originale		Sostituto		Originale		Sostituto	
User2	User 2	SHIFT + DVD 2	Shift + 2				
User3	User 3	SHIFT + CD - STB 3	Shift + 3				
1	1	TV 1	1				
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
0	0	HDMI - BAT 0	0				
Help	Help	PROGRAM TV/RADIO	TV/Radio /				

