



Originale	Sostituto
Power	Power
TV / Video	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide / EPG / -/--
Quick	Back / Return
Mute	Mute / Dimmer
Sleep	Sleep / Timer
Skip	Exit / Cancel / Clear









Originale	Sostituto
Display	Display / Media
Up / Prog+	Up
Up / Prog+	CH+ / Page+
Left / Vol-	Left
Left / Vol-	Vol-
Menu	Menu / Home
Menu	OK
Right / Vol+	Right
Right / Vol+	Vol+
Down / Prog-	Down
Down / Prog-	CH- / Page-
C-Temp	Info / Angle
P-STD	Picture / Format
Auto Search	Red / Netflix / Search
Wide	Zoom / Size
OSD Position	Green / APP / Repeat
OSD Language	Yellow / YouTube / Repeat





Originale

Sostituto

	S-STD		Sound / Title
	M/S		Audio / Lang I/II
	EQ		Subtitle / EQ
	Surround		Eject / Surround

Originale

Sostituto