


































Originale	Sostituto	Originale	Sostituto
Power		Power	Power
Info		Info / Angle	Info / Angle
Mute		Mute / Dimmer	Mute / Dimmer
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
MTS		Display / Media	Display / Media
C.C		Smart / List	Smart / List
Return		Back / Return	Back / Return
Vol+		Vol+	Vol+
Vol-		Vol-	Vol-
CH+		CH+ / Page+	CH+ / Page+
CH-		CH- / Page-	CH- / Page-
Guide		Guide / EPG / -/--	Guide / EPG / -/--
Fav		Fav / Marker / PC	Fav / Marker / PC
Exit		Exit / Cancel / Clear	Exit / Cancel / Clear
Up		Up	Up
Left		Left	Left
Enter		OK	OK
Right		Right	Right
Down		Down	Down
Input		AV / Input / RDS	AV / Input / RDS
Menu		Menu / Home	Menu / Home
Picture		Picture / Format	Picture / Format
Sound		Sound / Title	Sound / Title
Sleep		Sleep / Timer	Sleep / Timer

