



Originale	Sostituto
Power	Power
Source	AV / Input / RDS
Caption	Subtitle / EQ
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	Eject / Surround
PRE-CH	0
Auto Prog.	Fav / Marker / PC
FAV.CH	TV/Radio /
	Shift + Fav / Marker / PC

Originale	Sostituto
ADD/Del	D.Menu / Top
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-
CH List	Smart / List
CH-	CH- / Page-
Menu	Menu / Home
MTS	Display / Media
Guide	Guide / EPG / -/--
Tools	Setup / OPT /
Up	Up
Info	Info / Angle
Left	Left
Enter	OK
Right	Right
Return	Back / Return





Originale	Sostituto	Originale	Sostituto
 Down	 Down	 Play	 Play / Slow
 Exit	 Exit / Cancel / Clear	 >>	 >> / Tune+
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 PIP	 Text / Goto		
 PIP CH-	 I<< / Preset-		
 PIP CH+	 >>I / Preset+		
 P.Mode	 Picture / Format		
 S.Mode	 Sound / Title		
 P.Size	 Zoom / Size		
 Still	 Shift + Pause / Step / Step /		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		

