



Originale		Sostituto		Originale		Sostituto	
	Function M		Vol-		3		3
	Cond M		Vol+		4		4
	On		Power		5		5
	Last M		Smart / List		6		6
	Video Off		Picture / Format		7		7
	Step/Slow-		CH- / Page-		8		8
	Step/Slow+		CH+ / Page+		9		9
	2		2		0		0
	>>I		>>I / Preset+		+10		Guide / EPG / -/--
	I<<		I<< / Preset-		Random		Blue / Prime Video / Random
	Clear		Exit / Cancel / Clear		Setup		Setup / OPT /
	Search		Red / Netflix / Search		Standby		Shift + Power
	Repeat		Green / APP / Repeat		Open/Close		Eject / Surround
	A-B		Yellow / YouTube / Repeat		Angle		Info / Angle
	Program		TV/Radio /		Audio		Audio / Lang I/II
	1		1		Subtitle		Subtitle / EQ
	<<		<< / Tune-		Dimmer		Mute / Dimmer





	Originale	Sostituto
	Display	 Display / Media
	Menu	 Menu / Home
	Return	 Back / Return
	Top Menu	 D.Menu / Top
	Up	 Up
	Down	 Down
	Right	 Right
	Left	 Left
	Enter	 OK
	Play	 Play / Slow
	Stop	 Stop / Hold
	Pause	 Pause / Step / Freeze
	>>	 >> / Tune+

Originale	Sostituto





Originale	Sostituto	Originale	Sostituto
Open / Close	Eject / Surround	Down	Down
ON	Power	Return	Back / Return
STDBY	Shift + Power	Setup	Setup / OPT /
Audio	Audio / Lang I/II	Video Off	Display / Media
Angle	Info / Angle	Muting	Mute / Dimmer
Subtitle	Subtitle / EQ	I<<	I<< / Preset-
Last M	Smart / List	Play	Play / Slow
Top Menu	D.Menu / Top	>>I	>>I / Preset+
Menu	Menu / Home	<<	<< / Tune-
CH+	CH+ / Page+	Stop	Stop / Hold
Up	Up	>>	>> / Tune+
Vol+	Vol+	<II	Shift + << /
CH-	CH- / Page-	Pause	Pause / Step / Freeze
Left	Left	II>	Shift + >> /
Enter	OK	Repeat	Green / APP / Repeat
Right	Right	Random	Blue / Prime Video / Random
Vol-	Vol-	A-B	Yellow / YouTube / Repeat





Originale		Sostituto	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Search		Red / Netflix / Search

Originale		Sostituto	





Originale		Sostituto		Originale		Sostituto	
	Open / Close		Eject / Surround		Audio Sel		Audio / Lang I/II
	On		Power		Display		Display / Media
	Standby		Shift + Power		Dimmer		Shift + Mute / Dimmer
	< Input Selector		I<< / Preset-				
	Input Selector >		>>I / Preset+				
	CH+		CH+ / Page+				
	Up		Up				
	Vol+		Vol+				
	CH-		CH- / Page-				
	Left		Left				
	Enter		OK				
	Right		Right				
	Vol-		Vol-				
	Down		Down				
	Return		Back / Return				
	Setup		Setup / OPT /				
	Muting		Mute / Dimmer				

