













 

 





















Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 LANG.	 Audio / Lang I/II
 [=]	 Zoom / Size
 Home	 Shift + Menu /
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer

Originale	Sostituto
 Input	 AV / Input / RDS
 P+	 CH+ / Page+
 P-	 CH- / Page-
 [G=]	 Subtitle / EQ
 Info	 Info / Angle
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Netflix	 Shift + Red / Netflix /
 FPlay	 Shift + Blue / Prime
 Menu	 Menu / Home
 Youtube	 Shift + Yellow / YouTube /
 <<	 << / Tune-



