 

 

 

 

 

 

 

 

 

 









 











 



 

 



 





 

 













Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 CD	 Shift + 3
 Preset/Album	 Up
 FM	 Shift + 6
 I<<	 I<< / Preset-
 I<<	 Left
 OK	 OK
 >>I	 >>I / Preset+
 >>I	 Right
 USB/MP3Link	 Shift + 8
 Preset/Album	 Down
 Dock	 Shift + 7
 RDS/Display	 Zoom / Size
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/Menu	 Stop / Hold

Originale	Sostituto
 Vol-	 Vol-
 Vol+	 Vol+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Prog/Clock Set	 Guide / EPG / -/-
 0	 0
 Repeat/Shuffle	 Fav / Marker / PC
 Sleep/Timer	 Smart / List
 DSC	 Display / Media
 DBB	 Back / Return





 







 

 

 



 

 

 



 



 

 



Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 CD	 Shift + 3
 Preset/Album	 Up
 FM	 Green / APP / Repeat
 I<<	 I<< / Preset-
 I<<	 Left
 OK	 OK
 >>I	 >>I / Preset+
 >>I	 Right
 USB-MP3Link	 Red / Netflix / Search
 Preset/Album	 Down
 Dock	 Blue / Prime Video / Random
 RDS/Display	 Zoom / Size
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/Menu	 Stop / Hold

Originale	Sostituto
 Vol-	 Vol-
 Vol+	 Vol+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Prog/Clock Set	 Guide / EPG / -/--
 0	 0
 Repeat/Shuffle	 Fav / Marker / PC
 Sleep/Timer	 Smart / List
 DSC	 Display / Media
 DBB	 Back / Return





 



 



 

 

 

 

 

 

 











 

Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 CD	 Shift + 3
 Preset/Album	 Up
 FM	 Shift + 6
 I<<	 I<< / Preset-
 I<<	 Left
 OK	 OK
 >>I	 >>I / Preset+
 >>I	 Right
 USB/MP3Link	 Shift + 8
 Preset/Album	 Down
 Dock	 Shift + 7
 RDS/Display	 Zoom / Size
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/Menu	 Stop / Hold

Originale	Sostituto
 Vol-	 Vol-
 Vol+	 Vol+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Prog/Clock Set	 Guide / EPG / -/-
 0	 0
 Repeat/Shuffle	 Fav / Marker / PC
 Sleep/Timer	 Smart / List
 DSC	 Display / Media
 DBB	 Back / Return





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 CD	 Shift + 3
 Preset/Album	 Up
 FM	 Shift + 6
 I<<	 I<< / Preset-
 I<<	 Left
 OK	 OK
 >>I	 >>I / Preset+
 >>I	 Right
 USB/MP3Link	 Shift + 8
 Preset/Album	 Down
 Dock	 Shift + 7
 RDS/Display	 Zoom / Size
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/Menu	 Stop / Hold

Originale	Sostituto
 Vol-	 Vol-
 Vol+	 Vol+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Prog/Clock Set	 Guide / EPG / -/-
 0	 0
 Repeat/Shuffle	 Fav / Marker / PC
 Sleep/Timer	 Smart / List
 DSC	 Display / Media
 DBB	 Back / Return

