

 




 






















 
 












 




 




































Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up / P+	 CH+ / Page+
 1	 1	 Left / Vol-	 Left
 2	 2	 Left / Vol-	 Vol-
 3	 3	 Right / Vol+	 Right
 4	 4	 Right / Vol+	 Vol+
 5	 5	 Down / P-	 Down
 6	 6	 Down / P-	 CH- / Page-
 7	 7	 Red	 Red / Netflix / Search
 8	 8	 Green	 Green / APP / Repeat
 9	 9	 Yellow / FT-	 Yellow / YouTube / Repeat
 0 / AV	 0	 Blue / FT+	 Blue / Prime Video / Random
 0 / AV	 AV / Input / RDS	 Text Memo	 Smart / List
 P↔P	 Back / Return	 Info	 Info / Angle
 Timer	 Sleep / Timer	 Mute	 Mute / Dimmer
 Menu	 Menu / Home	 Text Cancel	 Display / Media
 Enter	 OK	 Text	 Text / Goto
 Up / P+	 Up	 Skip	 Sound / Title

Originale	Sostituto	Originale	Sostituto
 Power	 DIMMER MUTE	 SHIFT	 TV
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 PICTURE	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 OK	 CLEAR	 EXIT	 RETURN
 CANCEL	 LIST	 VOL+	 CH PAGE+
 SMART	 MEDIA	 VOL-	 CH PAGE-
 DISPLAY	TV	DVD	CD - STB
1	2	3	VIDEO
4	5	6	TAPE
7	8	9	TUNER
AUX - HDD	USB	BLUETOOTH	SKIP
GUIDE EPG	HDMI - SAT	FC	STATUS
NETFLIX	APP	YouTube	NORMAL
SEARCH	REPEAT	REPEAT A-B	FAV MARKER
RANDOM	Prime Video	RANDOM	MUTE
MUTE	DIMMER MUTE	MEDIA	GOTO
DISPLAY	TEXT	GOTO	TEXT
TEXT	GOTO	TEXT	TITLE
TEXT	GOTO	TEXT	SOUND
TEXT	GOTO	TEXT	SOUND



