





































 





























Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 2	 2
 Mute	 Mute / Dimmer	 3	 3
 Up	 Up	 4	 4
 Left	 Left	 5	 5
 OK	 OK	 6	 6
 Right	 Right	 7	 7
 Down	 Down	 8	 8
 Menu	 Menu / Home	 9	 9
 Exit	 Exit / Cancel / Clear	 0	 0
 Red / UHF	 Red / Netflix / Search	 EPG	 Guide / EPG / -/-
 Green / Audio	 Green / APP / Repeat	 Group	 Smart / List
 Green / Audio	 Audio / Lang I/II	 Vol+	 Vol+
 Yellow / Pause	 Yellow / YouTube / Repeat	 Vol-	 Vol-
 Yellow / Pause	 Pause / Step / Freeze	 CH+	 CH+ / Page+
 Blue / Recall	 Blue / Prime Video / Random	 CH-	 CH- / Page-
 Blue / Recall	 Back / Return	 Page+	 Shift + CH+ / Page+
 1	 1	 Page-	 Shift + CH- / Page-

Originale	Sostituto	Originale	Sostituto
 2	 2	 2	 2
 3	 3	 3	 3
 4	 4	 4	 4
 5	 5	 5	 5
 6	 6	 6	 6
 7	 7	 7	 7
 8	 8	 8	 8
 9	 9	 9	 9
 0	 0	 0	 0
 EPG	 Guide / EPG / -/-	 EPG	 Guide / EPG / -/-
 Group	 Smart / List	 Group	 Smart / List
 Vol+	 Vol+	 Vol+	 Vol+
 Vol-	 Vol-	 Vol-	 Vol-
 CH+	 CH+ / Page+	 CH+	 CH+ / Page+
 CH-	 CH- / Page-	 CH-	 CH- / Page-
 Page+	 Shift + CH+ / Page+	 Page+	 Shift + CH+ / Page+
 Page-	 Shift + CH- / Page-	 Page-	 Shift + CH- / Page-





Originale	Sostituto	Originale	Sostituto
 INFO	Info	 ANGLE INFO	Info / Angle
 STB/TV	STB / TV	 RDS AV INPUT	AV / Input / RDS
 TEXT	Text	 GOTO TEXT	Text / Goto
 SUBT	SUBT	 EQ SUBTITLE	Subtitle / EQ

