







 







 



 







 

 

 

 

 



 







 

 

 



 

 

 

 



 
















 
 
 
 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	1		1		P+		CH+ / Page+
	2		2		P-		CH- / Page-
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		OK
	8		8		[G]		Guide / EPG / -/--
	9		9		i		Info / Angle
	0		0		←		Back / Return
	Lang		Audio / Lang I/II		Exit		Exit / Cancel / Clear
	[=].		Subtitle / EQ		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	Home		Shift + Menu /		Text		Text / Goto
	Smart		Smart / List		<<		<< / Tune-
	Vol+		Vol+		Stop		Stop / Hold





Originale	Sostituto
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Google Play	 Display / Media

Originale	Sostituto

