



 





 

 



 











 

 







Originale	Sostituto
 Standby	 Power
 USB	 Shift + 8
 Open/Close	 Eject / Surround
 Setup	 Setup / OPT /
 Display	 Display / Media
 Clear	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Title	 Guide / EPG / -/--
 0	 0

Originale	Sostituto
 Menu	 Menu / Home
 Audio	 Audio / Lang I/II
 Search	 Red / Netflix / Search
 Sub / MP3	 Subtitle / EQ
 Sub / MP3	 Sound / Title
 Left	 Left
 Up	 Up
 Right	 Right
 Enter	 OK
 Down	 Down
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow











 

 

 









 







 






 


 



 



 



 



 

 

 

 

 





Originale	Sostituto
 Vol+	 Vol+
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Vol-	 Vol-
 Angle	 Info / Angle
 Mute	 Mute / Dimmer
 L/R	 AV / Input / RDS
 N/P	 Text / Goto
 PBC	 Smart / List
 Slow	 Shift + Play /
 V-Mode	 D.Menu / Top
 Return	 Back / Return
 HD/Res.	 Picture / Format
 Program	 TV/Radio /
 Zoom	 Zoom / Size

Originale	Sostituto







Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Menu	 Menu / Home
 USB	 Shift + 8	 Audio	 Audio / Lang I/II
 Open/Close	 Eject / Surround	 Search	 Red / Netflix / Search
 Setup	 Setup / OPT /	 Sub/MP3	 Subtitle / EQ
 Display	 Display / Media	 Left	 Left
 Clear	 Exit / Cancel / Clear	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Enter	 OK
 3	 3	 Down	 Down
 4	 4	 <<	 << / Tune-
 5	 5	 >>	 >> / Tune+
 6	 6	 I<<	 I<< / Preset-
 7	 7	 >>I	 >>I / Preset+
 8	 8	 Step	 Pause / Step / Freeze
 9	 9	 Stop	 Stop / Hold
 Title	 Sound / Title	 Play/Pause	 Play / Slow
 0	 0	 Vol+	 Vol+

Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Menu	 Menu / Home
 USB	 Shift + 8	 Audio	 Audio / Lang I/II
 Open/Close	 Eject / Surround	 Search	 Red / Netflix / Search
 Setup	 Setup / OPT /	 Sub/MP3	 Subtitle / EQ
 Display	 Display / Media	 Left	 Left
 Clear	 Exit / Cancel / Clear	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Enter	 OK
 3	 3	 Down	 Down
 4	 4	 <<	 << / Tune-
 5	 5	 >>	 >> / Tune+
 6	 6	 I<<	 I<< / Preset-
 7	 7	 >>I	 >>I / Preset+
 8	 8	 Step	 Pause / Step / Freeze
 9	 9	 Stop	 Stop / Hold
 Title	 Sound / Title	 Play/Pause	 Play / Slow
 0	 0	 Vol+	 Vol+





Originale		Sostituto	
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Vol-		Vol-
	Angle		Info / Angle
	Mute		Mute / Dimmer
	L/R		AV / Input / RDS
	N/P		Text / Goto
	PBC		Smart / List
	Slow	 + 	Shift + Play /
	V-Mode		D.Menu / Top
	Return		Back / Return
	HD/Res.		Picture / Format
	Program		TV/Radio /
	Zoom		Zoom / Size

Originale		Sostituto	

