







 

 

 

 



 

 

 

 

 

 

 

 





 


 


 

 


 
 



 

 


 



 

Originale	Sostituto
 Off	 Shift + Power
 Power	 Power
 Quick Select 1 (DVD)	 Shift + 1
 Quick Select 2 (SAT/CBL)	 Shift + 2
 Quick Select 3 (VCR/iPod)	 Shift + 3
 TV 1	 1
 TUNER 2	 6
 V.AUX 3	 7
 DVD 4	 2
 HDP 5	 3
 iPod 6	 8
 Speakers	 Eject / Surround
 DVR 7	 5
 VCR 8	 4
 SAT/CBL 9	 0
 Input Mode	 Shift + AV / Input / RDS
 Source Select	 AV / Input / RDS

Originale	Sostituto
 V.Sel	 Picture / Format
 Sleep	 Sleep / Timer
 Multi EQ	 Green / APP / Repeat
 Dyn EQ	 Yellow / YouTube / Repeat
 Dyn Vol	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 CH.Level	 D.Menu / Top
 Volume+	 Vol+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Volume-	 Vol-
 Setup	 Setup / OPT /
 Search	 Red / Netflix / Search



 



 

 


Originale	Sostituto
 Return	 Back / Return
 Memory	 Rec / Rec Mode
 Band	 Stop / Hold
 Shift	 Pause / Step / Freeze
 Mode	 Play / Slow
 Tun-	 Shift + << /
 Tuning-	 << / Tune-
 Tun+	 Shift + >> /
 Tuning+	 >> / Tune+
 Preset-	 << / Preset-
 Channel-	 CH- / Page-
 Preset+	 >> / Preset+
 Channel+	 CH+ / Page+
 STD	 Sound / Title
 Dimmer	 Shift + Mute / Dimmer
 Status	 Info / Angle
 Cinema	 Audio / Lang I/II

Originale	Sostituto
 Music	 Subtitle / EQ
 Simu	 Smart / List
 Restorer	 Display / Media





	Originale	Sostituto	Originale	Sostituto
	Menu	 Menu / Home		
	Up	 Up		
	Left	 Left		
	Enter	 OK		
	Right	 Right		
	Down	 Down		
	Skip+	 Smart / List		
	Stop	 Stop / Hold		
	Pause	 Pause / Step / Freeze		
	Play	 Play / Slow		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	I<<	 I<< / Preset-		
	>>I	 >>I / Preset+		

