 
 




Originale	Sostituto
 Power	 Power
 Open/Close	 Eject / Surround
 Enter	 OK
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 PIP	 Zoom / Size
 Top Menu	 D.Menu / Top
 Pop-Up/Menu	 Menu / Home
 Return	 Back / Return
 Home	 Shift + Home / Menu /
 Miracast	 Smart / List
 On Screen	 Display / Media
 Status	 Setup / OPT /

Originale	Sostituto
 Clear	 Exit / Cancel / Clear
 2nd Audio	 Mute / Dimmer
 Stop	 Stop / Hold
 Search	 Shift + Netflix / Search /
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Green/Program	 Green / APP / Repeat
 Red/Zoom	 Red / Netflix / Search
 Yellow/Shuffle	 Yellow / YouTube / Repeat
 Blue/Repeat	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3



