 













 
 







Originale	Sostituto
 Power	 Power
 Input	 AV / Input / RDS
 Sleep	 Sleep / Timer
 TV	 Shift + 1
 Cable/Sat	 Shift + 2
 BD/DVD	 Shift + 3
 DVR/VCR	 Shift + 4
 Audio	 Audio / Lang I/II
 AUX	 Shift + 7
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 0	 0
 -	 Shift + Guide / EPG / -/-
 CH RTN	 Fav / Marker / PC
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 Media Share	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Search	 Shift + Green / APP /
 Home	 Menu / Home
 World	 Smart / List
 Quick	 TV/Radio /
 Guide	 Guide / EPG / -/-
 Back	 Back / Return





Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 ↑	 +  Shift + Up
 Up	 Up
 ↓	 +  Shift + Down
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 <<<	 <<< / Tune-
 <<<	 +  Shift + <<< /
 Play	 Play / Slow
 >>>	 >>> / Tune+
 >>>	 +  Shift + >>> /
 I<<<	 I<<< / Preset-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 >>>I	 >>>I / Preset+

Originale	Sostituto
 Netflix	 +  Shift + Red / Netflix /
 eManual	 Zoom / Size
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Pic Size	 +  Shift + Zoom /
 Pic Mode	 Picture / Format
 Setup	 Setup / OPT /
 MTS	 +  Shift + Subtitle / EQ
 CC	 Subtitle / EQ

