



Originale		Sostituto		Originale		Sostituto	
	Power		Power		9		9
	Sleep		Sleep / Timer		0		0
	O/Play		Subtitle / EQ		Del		Exit / Cancel / Clear
	Play		Play / Slow		+10		Guide / EPG / -/-
	Clock/Timer		Shift + Sleep / Timer		iPod		Red / Netflix / Search
	Program		TV/Radio /		CD		Shift + 3
	Vol+		Vol+		Radio/Ext In		Green / APP / Repeat
	Vol-		Vol-		I<<		I<< / Preset-
	Mute		Mute / Dimmer		Pause		Pause / Step / Freeze
	1		1		>>I		>>I / Preset+
	2		2		<<		<< / Tune-
	3		3		Stop		Stop / Hold
	4		4		>>		>> / Tune+
	5		5		Sound		Sound / Title
	6		6		D.Bass		D.Menu / Top
	7		7		Preset EQ		Setup / OPT /
	8		8		Display/Dimmer		Info / Angle



