






































Originale	Sostituto	Originale	Sostituto
Lang./Rewind	 << / Tune-	0/10	 0
TV	 TV/Radio /	FAV Pref.	 Fav / Marker / PC
Epg	 +  Shift + Guide / EPG / -/-	CH/Page-	 CH- / Page-
Browse	 Smart / List	Green	 Green / APP / Repeat
TV/SAT	 AV / Input / RDS	Yellow	 Yellow / YouTube / Repeat
Lang./Rewind	 Sound / Title	Blue	 Blue / Prime Video / Random
Red	 Red / Netflix / Search	Dev	 >> / Preset+
1. ?	 1	Freeze	 +  Shift + Pause / Step /
2abc	 2	Dec/Pause	 Pause / Step / Freeze
3def	 3	East	 Rec / Rec Mode
4ghi	 4	H/V Play	 Play / Slow
5jkl	 5	LNB F.Forward	 >> / Tune+
6mno	 6	Menu	 Menu / Home
7pqrm	 7	Mute	 Mute / Dimmer
8tuv	 8	Opt?	 Setup / OPT /
9wxyz	 9	App	 +  Shift + Green / APP /
Guide Pilote	 Guide / EPG / -/-	Info	 Info / Angle



Originale	Sostituto	Originale	Sostituto
Subt.List	 Subtitle / EQ		
Sleep Timer	 Sleep / Timer		
Video	 +  Shift + 4		
Text	 Text / Goto		
Zoom	 Zoom / Size		
PWR On/Off	 Power		
Menu Up	 Up		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Exit	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
CH/Page+	 CH+ / Page+		
Volume-	 Vol-		
Audio	 Audio / Lang I/II		

