



Originale	Sostituto
Power	Power
Display	Display / Media
Play/Pause iPad	Shift + Play /
Play/Pause iPod	Play / Slow
Play/Pause USB	8
Play/Pause CD	3
Tuner/PC/Audio In	Smart / List
CD/USB	AV / Input / RDS
Menu/Cancel	Menu / Home
Up	Up
Down	Down
I<<	I<< / Preset-
>>I	>>I / Preset+
Set	OK
Stop/PTY	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+

Originale	Sostituto
Program	TV/Radio /
Random	Blue / Prime Video / Random
Repeat/Tuner	Green / APP / Repeat
Clock/Timer	Shift + Sleep / Timer
APS	Shift + Smart / List
Sleep	Sleep / Timer
Muting	Mute / Dimmer
Sound Turbo	Audio / Lang I/II
HBS	CH- / Page-
Sound Mode	Sound / Title
Surround	Eject / Surround
Resume	D.Menu / Top
Dimmer	Shift + Mute / Dimmer
Vol+	Vol+
Vol-	Vol-

