


| Originale | Sostituto |
|--|---|
|  Power On |  Power |
|  Power Off |  Shift + Power |
|  Mode |  Picture / Format |
|  Open/Close |  Eject / Surround |
|  A-B Repeat |  Yellow / YouTube / Repeat |
|  Repeat |  Green / APP / Repeat |
|  Random |  Blue / Prime Video / Random |
|  Zoom |  Zoom / Size |
|  Angle |  Info / Angle |
|  Subtitle |  Subtitle / EQ |
|  Audio |  Audio / Lang I/II |
|  Display |  Display / Media |
|  Clear |  Exit / Cancel / Clear |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |

| Originale | Sostituto |
|---|--|
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  +10 |  Guide / EPG / -/- |
|  Menu |  Menu / Home |
|  Top Menu |  D.Menu / Top |
|  Return |  Back / Return |
|  Setup |  Setup / OPT / |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  OK |
|  Search Mode |  Red / Netflix / Search |

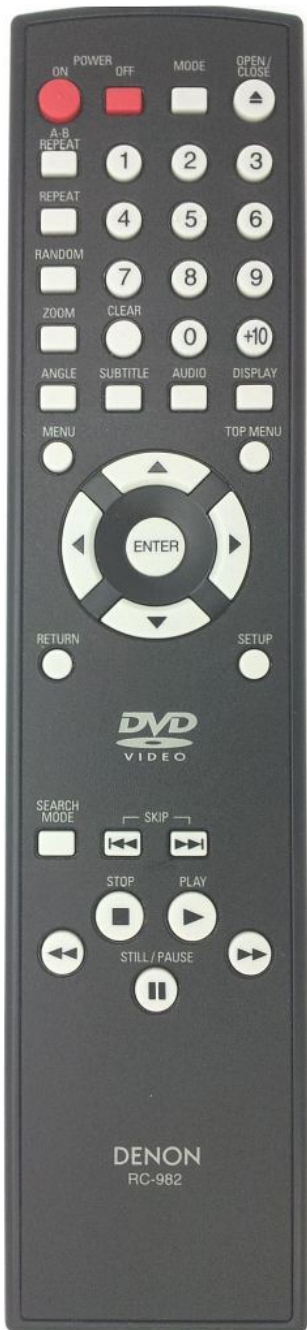



| | Originale | Sostituto |
|---|-------------|---|
|  | I<< Skip |  I<< / Preset- |
|  | Skip >>I |  >>I / Preset+ |
|  | << |  << / Tune- |
|  | >> |  >> / Tune+ |
|  | Stop |  Stop / Hold |
|  | Play |  Play / Slow |
|  | Still/Pause |  Pause / Step / Freeze |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

| | Originale | Sostituto |
|--|-----------|-----------|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

