 




 









 




















 



 

 

 

 

 













 





 









 





Originale	Sostituto
 Standby AV	 Power
 Info	 Info / Angle
 Direct Navigator	 Smart / List
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--
 Exit	 Exit / Cancel / Clear
 Edit	 Fav / Marker / PC
 <<	 << / Tune-
 >>	 >> / Tune+
 Delete	 Back / Return
 Prog/Check	 Setup / OPT /
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Red	 Red / Netflix / Search

Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Live	 Display / Media





Originale		Sostituto	
	Tv/Radio		TV/Radio /
	Rec		Rec / Rec Mode
	Rec Pause		Shift + Pause / Step /
	Viewer		Zoom / Size
	Skip		AV / Input / RDS
	Set Book Mark		Subtitle / EQ
	Go Book Mark		Shift + TV/Radio / Program
	Vol+		Vol+
	Vol-		Vol-
	Timer Rec		Sleep / Timer
	Replay		>>I / Preset+
	Audio		Audio / Lang I/II
	Aspect		Picture / Format

Originale		Sostituto	



 










 
 





 

 
 








 





 

 

Originale	Sostituto
	Shift + Power
	Shift + AV / Input / RDS
	CH+ / Page+
	CH- / Page-
	Shift + Vol+
	Shift + Vol-
	Power
	Info / Angle
	Smart / List
	Menu / Home
	Guide / EPG / -/--
	Exit / Cancel / Clear
	Fav / Marker / PC
	<< / Tune-
	>> / Tune+
	Back / Return
	Setup / OPT /

Originale	Sostituto
	Up
	Down
	Left
	Right
	OK
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow
	1
	2
	3
	4
	5





Originale	Sostituto
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Live	 Display / Media
 Tv/Radio	 TV/Radio /
 Rec	 Rec / Rec Mode
 Rec Pause	 Shift + Pause / Step /
 Viewer	 Zoom / Size
 Skip	 AV / Input / RDS
 Set Book Mark	 Subtitle / EQ
 Go Book Mark	 Shift + TV/Radio / Program
 Vol+	 Vol+
 Vol-	 Vol-
 Timer Rec	 Sleep / Timer
 Replay	 I<< / Preset-

Originale	Sostituto
 Audio	 Audio / Lang I/II
 Aspect	 Picture / Format

