



Originale		Sostituto		Originale		Sostituto	
	Power		Power		6		6
	AUX		Shift + 7		7		7
	Dimmer		Shift + Mute / Dimmer		8		8
	2		2		9		9
	Color		Setup / OPT /		0		0
	3		3		10		Guide / EPG / -/-
	Clock/Timer		Shift + Sleep / Timer		10+		Fav / Marker / PC
	FM Mode		Shift + TV/Radio / Program		Title/Edit		Back / Return
	Sleep		Sleep / Timer		Display/Chara		Zoom / Size
	1		1		Cancel		Exit / Cancel / Clear
	EON		Shift + Smart / List		Set		Menu / Home
	Display		Display / Media		Enter		OK
	Select-		CH- / Page-		Repeat		Green / APP / Repeat
	Select+		CH+ / Page+		Play Mode		Smart / List
	4		4		MD Play/Pause		Pause / Step / Freeze
	PTY		Red / Netflix / Search		CD Play/Pause		Play / Slow
	5		5		FM/AM		TV/Radio /



