 

 

 

 

 

 

 

 

 

 

 

 

 

 



 



 

 

 



 



 



 



 

 

 



 

 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Right		Right
	Epg / Setup		Picture / Format		Vol+		Vol+
	Dvd / Av / Dtv		AV / Input / RDS		Ok		OK
	Dvd/Usb/Card		Shift + 2		1		1
	Info / Osd		Info / Angle		2		2
	→←Search		Zoom / Size		3		3
	Audio		Audio / Lang I/II		4		4
	Subtitle		Subtitle / EQ		5		5
	Menu		Menu / Home		6		6
	Exit/Title		Exit / Cancel / Clear		7		7
	Fav / Zoom		Fav / Marker / PC		8		8
	Up		Up		9		9
	Ch+		CH+ / Page+		0/10		0
	Down		Down		10+		Guide / EPG / -/-
	Ch-		CH- / Page-		Dvd Vol+		Shift + Vol+
	Left		Left		Dvd Vol-		Shift + Vol-





Originale		Sostituto		Originale		Sostituto	
	Tv-R / Repeat		TV/Radio /				
	Text / Program		Text / Goto				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Play		Play / Slow				
	I<< / Prev		I<< / Preset-				
	>>I / Next		>>I / Preset+				
	<< / Rev		<< / Tune-				
	>> / Fwd		>> / Tune+				

