





 



































 













Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Program	 TV/Radio /
 Display	 Display / Media	 Random	 Blue / Prime Video / Random
 Play/Pause iPad	 Play / Slow	 Repeat/Tuner	 Text / Goto
 Play/Pause iPod	 Pause / Step / Freeze	 Clock/Timer	 Shift + Sleep / Timer
 Tuner	 6	 APS	 Zoom / Size
 PC	 Fav / Marker / PC	 Sleep	 Sleep / Timer
 Audio In	 Audio / Lang I/I	 Muting	 Mute / Dimmer
 Menu	 Menu / Home	 Vol+	 Vol+
 Cancel	 Exit / Cancel / Clear	 Vol-	 Vol-
 Up	 Up	 Sound Turbo	 Shift + TV/Radio / Program
 Down	 Down	 HBS	 D.Menu / Top
 I<<	 I<< / Preset-	 Sound Mode	 Sound / Title
 >>I	 >>I / Preset+	 Surround	 Eject / Surround
 Set	 OK	 Resume	 Picture / Format
 Stop	 Stop / Hold	 Dimmer	 Shift + Mute / Dimmer
 <<	 << / Tune-		
 >>	 >> / Tune+		

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 TV	 DVD
 Display	 Display / Media	 SAT	 AUX
 Play/Pause iPad	 Play / Slow	 SLOW	 STEP-FREEZE
 Play/Pause iPod	 Pause / Step / Freeze	 HOLD	 REC MODE
 Tuner	 6	 TUNE-	 TUNE+
 PC	 Fav / Marker / PC	 PRESET-	 PRESET+
 Audio In	 Audio / Lang I/I	 TITLE	 EQ
 Menu	 Menu / Home	 SURROUND	 SURROUND
 Cancel	 Exit / Cancel / Clear	 RESUME	 FORMAT
 Up	 Up	 DIMMER	 SHIFT
Down	Down		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
Set	OK		
Stop	Stop / Hold		
<<	<< / Tune-		
>>	>> / Tune+		

