









 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Jump		Smart / List
	S.Mode		Sound / Title		.		Display / Media
	MTS		Text / Goto		Mute		Mute / Dimmer
	P.Mode		Picture / Format		Input		AV / Input / RDS
	Caption		Subtitle / EQ		Vol+		Vol+
	Sleep		Sleep / Timer		Vol-		Vol-
	P.Size		Zoom / Size		CH+		CH+ / Page+
	1		1		CH-		CH- / Page-
	2		2		Guide		Guide / EPG / -/-
	3		3		Exit		Exit / Cancel / Clear
	4		4		Up		Up
	5		5		Down		Down
	6		6		Down		Shift + Down
	7		7		Left		Left
	8		8		OK		OK
	9		9		Info		Info / Angle
	0		0		Menu		Menu / Home





Originale	Sostituto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 List	 Shift + Smart / List
 FAV CH	 Fav / Marker / PC
 Timer	 Shift + Sleep / Timer
 Freeze	 Pause / Step / Freeze

Originale	Sostituto

