


 
 
 


 

 


 
 



















 



 

 



 

 

 

 









 







 















Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 DTV	 Smart / List
 Radio	 TV/Radio /
 USB	 Shift + 8
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide / EPG / -/-

Originale	Sostituto
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Source	 AV / Input / RDS
 Info	 Info / Angle
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK





Originale	Sostituto
 Aspect	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 Text Hold	 Setup / OPT /
 Zoom/Text/DVD	 Zoom / Size
 Power/Display	 Display / Media
 Rec	 Rec / Rec Mode
 DVD Menu	 D.Menu / Top
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop/Eject	 Stop / Hold
 Rec List/DVD	 Shift + Rec / Rec Mode
 << PVR/DVD	 << / Tune-
 >> PVR/DVD	 >> / Tune+
 Play	 Play / Slow

Originale	Sostituto
 Pause	 Pause / Step / Freeze
 Red/Goto	 Red / Netflix / Search
 Green/A-B	 Green / APP / Repeat
 Yellow/Angle/3D	 Yellow / YouTube / Repeat
 Blue/Repeat	 Blue / Prime Video / Random

